
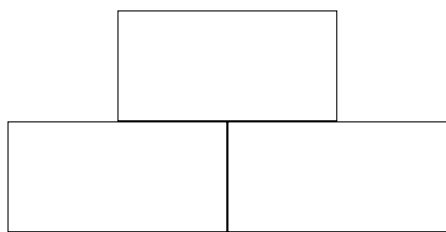


Drywall Screw and Panel Placement

640 and 660 Non-Fire Rated Installations

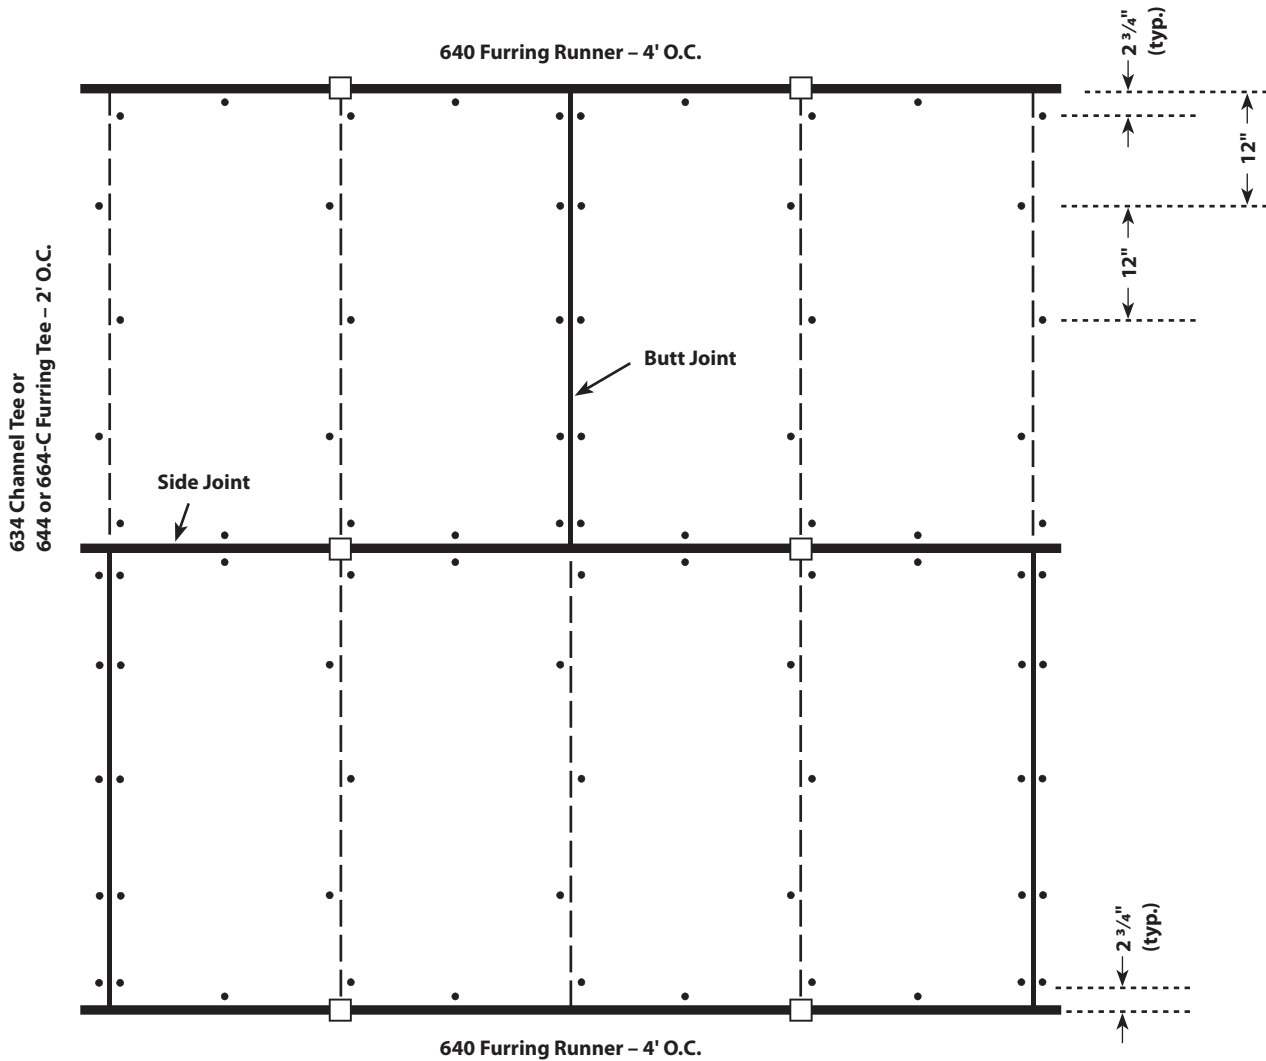



Staggered Butt Joints

All Side Joints must occur on main runners.

- – Hanger Wires
- – Drywall Screws

Drywall Screw and Panel Placement

650 and 670 Fire Rated Installations

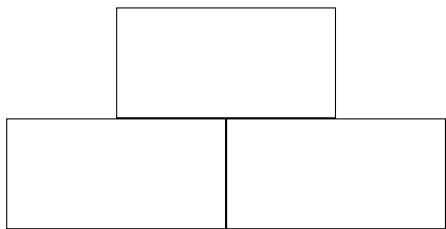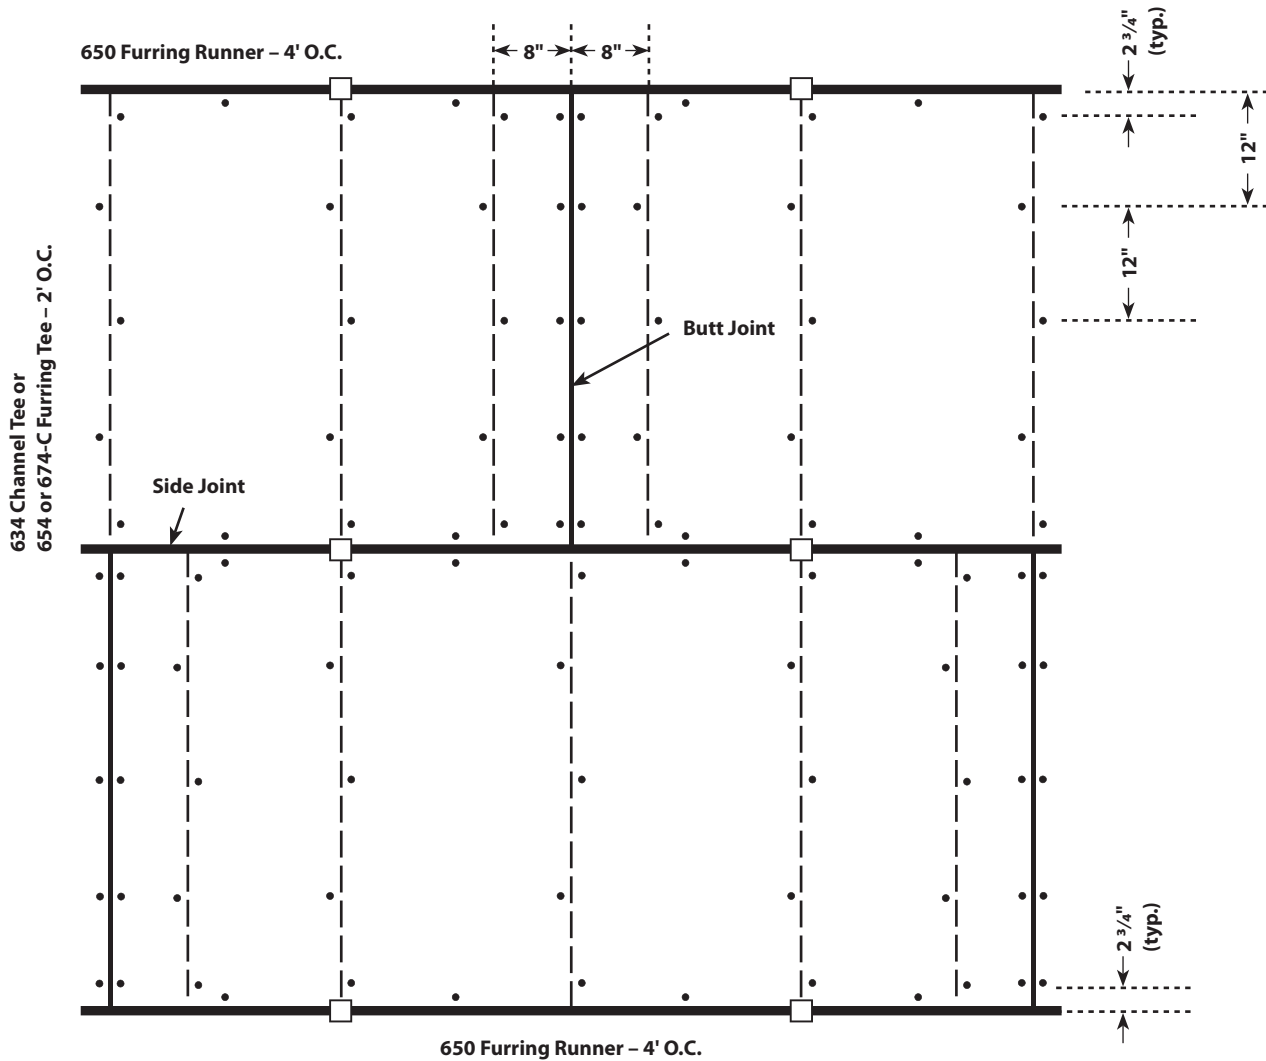

Staggered Butt Joints

All Side Joints must occur on main runners.

- - Hanger Wires
- - Drywall Screws

ROCKFON, LLC | 4849 S. Austin Ave., Chicago, IL 60638 USA

Tel. +1-800-323-7164 | Fax. +1-800-222-3744 | www.rockfon.com | cs@rockfon.com | 10-2015